

HOW TO MOUNT Supply Air Temperature Sensor

Mount sensor in suply ducting +/- 75cm after heater

