

EXTERNAL CONNECTIONS

OJ Air2 Master		
Start/stop	Din 3	6-7
External Fire	Din4	7-8
High speed	Din5	9-10
Co2 Sensor	Ain1	12-14
VOC Sensor	Ain2	13-14
Ext.damper 24V ac	Do1	25
A Alarm	Do3	28-29
B Alarm	Do4	30-31
Operating Relay	Do5	32-33
OJ Air2 EXT (option)		
Heating(HP) CoolingHP	Ao1	3-4
Cooling	Ao2	1-2
Heating (HP)	Do1	13-14
Cooling (HP)	Do2	15-16
13 K2 (option)		
Pump switch L (230V)	13 k-2	14
Pump switch N (230V)	13 k-2	24